

# Instructions for use

## Spirit stove



### **Please note:**

Is there a high flame from the burner nozzle? → Preheating was not adequate and must be repeated.

The two small flames inside the burner are preheating flames and should always be burning.

When controlling the burner flame, please make sure the preheating flame will not go out.

### **To discontinue using your stove:**

→ Turn the valve screw clockwise to shut off the supply of spirit. Be absolutely sure to keep the valve screw closed to prevent spirit from leaking.

### **Care and maintenance**

→ Exclusively use clean spirit only.

→ Wipe off leftovers with a soft moist cloth. Do not use any abrasive or corrosive cleaning agents.

→ Make sure the injector orifice and the preheating opening do not get plugged up. If they do, they must be cleaned using a needle or a thin wire.

→ After use (for extended periods of nonuse), drain the spirit from the tank.

Subject to change in terms of design or color without notice.

Heidersdorfer Produktions- und Vertriebsgesellschaft mbH \* Saydaer Str. 18 \* 09526 Heidersdorf \* Germany  
Phone: +49 (0)37361 4640 \* Facsimile: +49 (0)37361 46464 \* E-Mail: [info@hpv-dmbh.de](mailto:info@hpv-dmbh.de)

85270/11/2017



Before using your spirit stove, please thoroughly study the safety information provided herein and these instructions for use. The material and workmanship of this product are such that malfunctions will be excluded if it is properly used as intended.

## **Important safety information:**

The vent in the filling plug of the tank must always be open and should never be closed. If the vent is closed, an excess pressure will build up inside the tank that may damage the tank and thus cause imminent fire or explosion hazards.

When relocating or storing the stove, fully drain the tank to prevent spirit leakage.

Please bear in mind that methylated spirit will only be an appropriate fuel if properly used. Spilled methylated spirit will burn with a practically invisible flame, that is to say major damage may already have been caused before the hazard is detected.

Check the tank for leaks that may be caused through handling or other causes at regular intervals. If there are any leaks, the stove should not be used any more. Have it checked by an expert.

Spirit stoves may only be used on a horizontal non-flammable base. A distance of no less than 25 cm must be maintained to flammable objects or substances.

Never top up spirit while the stove is burning or still hot from operation. When filling spirit, keep open flames away from the filler neck.

Never ever leave your stove unattended while it is being used.

## **Filling spirit in the stove**

- Place the stove on a horizontal non-flammable base.
- Before filling the spirit, close the valve screw by turning it clockwise.
- Unscrew the filling plug from the tank.
- Fill spirit into the tank by approx. 3/4 of its capacity - use a funnel (wipe off any spilled spirit).

Filling capacity:      Salsa approx. 0.4 Liter

                          Mambo approx. 0.8 Liter

- Close the tank once again using the filling plug.



**Never top up spirit while the stove is burning or still hot. Always keep the vent in the filling plug of the tank open.**

## **To use your stove:**

- After filling, wait for 2 to 3 minutes so the wick in the carburetor pipe can soak with spirit.
- Open the valve screw by turning it anticlockwise. Now, spirit will gradually drip off the burner nozzle and into the preheating trough. **Please note:** The preheating trough should only be filled with spirit by one half.
- Close the valve screw once again.
- Now, ignite the spirit in the preheating trough.
- Just before the preheating flame goes out, gradually open the valve screw once again - by approx. 3 turns. If the preheating flame has already gone out, the burner must be ignited with a match.